

DH230-RXXXX


Ver. 4 Rel. 11/05/08



"E" = NEGATIVE 6-20VDC "F" = NEGATIVE 24-48VDC

"G" = NEGATIVE 125VDC

"X" = IF MICRO COMM

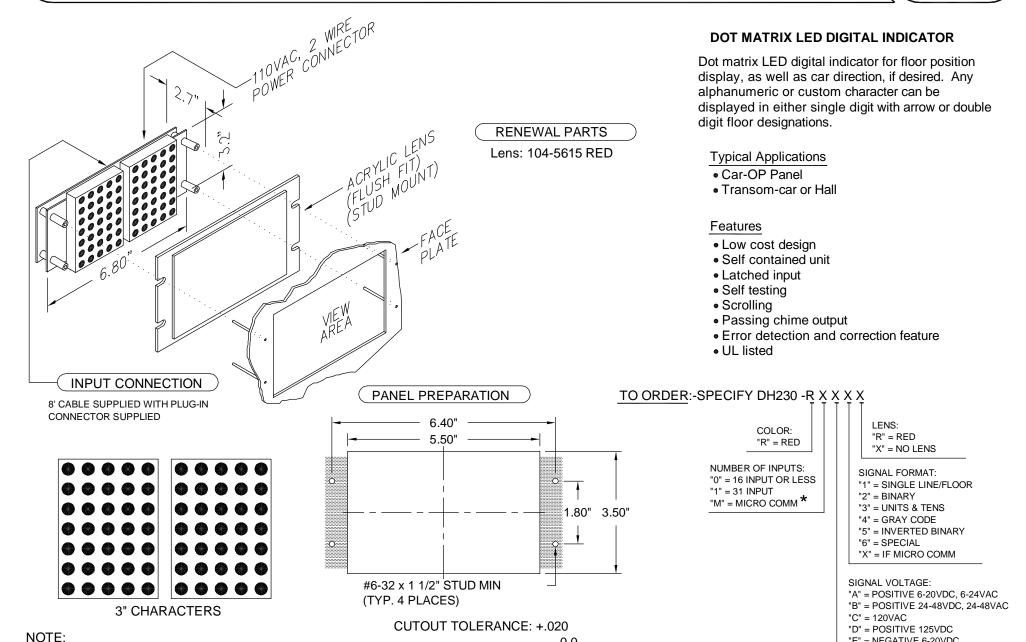

- 0.0

- 1. If a special voltage is required, please consult factory.
- 2. *110VAC not required for power supply on Micro Comm units