


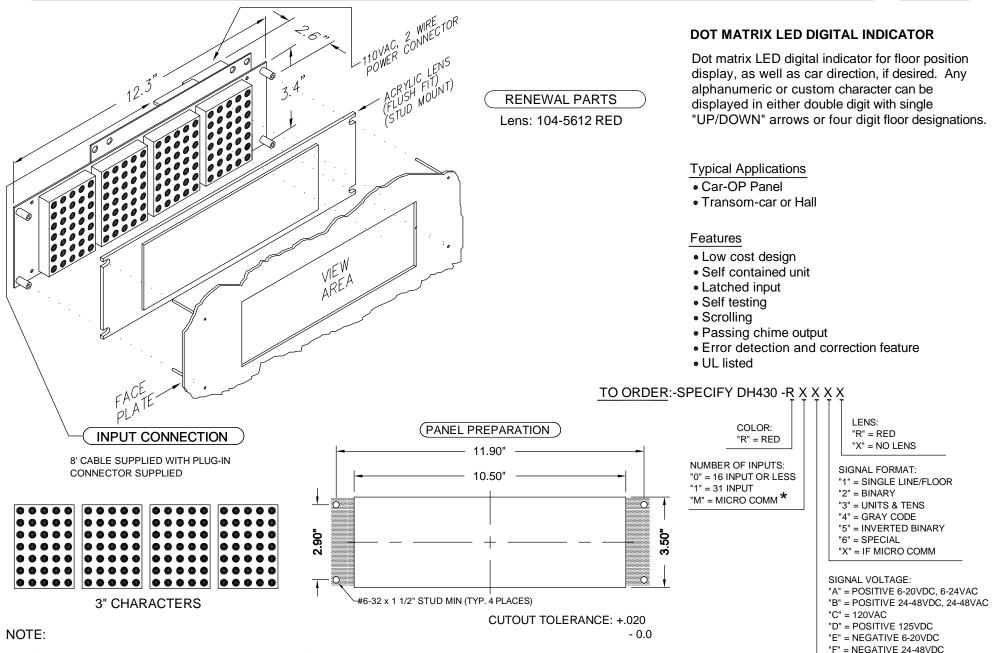

"G" = NEGATIVE 125VDC

"X" = IF MICRO COMM



1. If a special voltage is required, please consult factory.

2. *110VAC not required for power supply on Micro Comm units