





C.E. Electronics, Inc. (US) 2107 Industrial Drive, Bryan, Ohio 43506 p: 419.636.6705 www.ceelectronics.com

C.E. Electronics, Ltd. (UK) P.O. Box 1679 Marlow, Bucks SL7 3ZG, UK p: +44 (0) 1628 487633 www.ceelectronics.co.uk

ELITE PI® PRO

9 inch Elite PI® PRO

The MICRO COMM® Elite PI® PRO is the most flexible position indicator available. With the Elite PI® Designer software, you can PROgram your own position indicator by customizing background colors and logos, messages, and arrow styles. This system offers full network support with our ENET, giving you the ability to PROgram the screen from any computer in the building.

In addition to design flexibility, the MICRO COMM® Elite PI® PRO can display floor, priority, and time-based messages.

TYPICAL APPLICATIONS:

- Car operating panel
- Car transom
- **>** Lobby


FEATURES:

- Fully customizable and PROgrammable
- > Elite PI® software
- Streaming video capabilities with an HDINT video encoder
- > Passing chime output
- > Self testing
- >Low profile
- > Multi-car capabilities for hallway use
- > MICRO COMM serial link input
- One remote cpu box can support 2 screens
- > CPU Box can be up to 25 feet from screen

EA090-XHX2

Ver. 8 Rel. 09/04/2024

ELITE PI® **PRO**

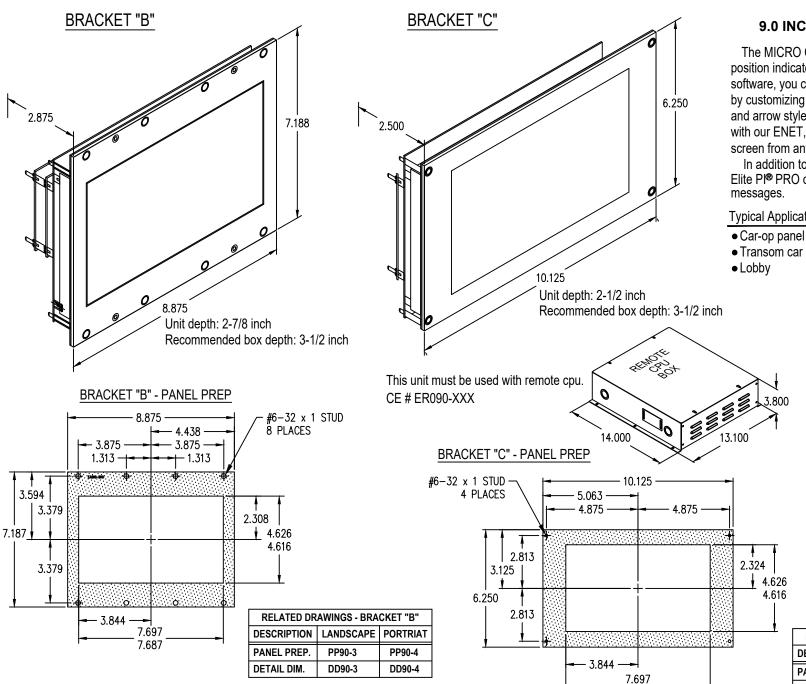

9.0 INCH Elite PI® PRO

The MICRO COMM® Elite PI® PRO is the most flexible position indicator available. With the Elite PI® Designer software, you can PROgram your own position indicator by customizing background colors and logos, messages, and arrow styles. This system offers full network support with our ENET, giving you the ability to PROgram the screen from any computer in the building.

In addition to design flexibility, the MICRO COMM® Elite PI® PRO can display floor, priority, and time-based


Typical Applications

- Transom car

7.687

Features:

- Fully customizable and **PROgrammable**
- Elite PI® software
- Streaming video capabilities with an HDINT video encoder
- Passing chime output
- Self-testing
- Low profile
- Multi-car capabilities for hallway use
- MICRO COMM serial link input
- One remote cpu box can support 2 screens
- CPU box can be up to 25 feet from screen

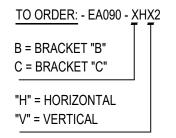

RELATED DRAWINGS - BRACKET "C"				
DESCRIPTION	LANDSCAPE	PORTRIAT		
PANEL PREP.	PP90-5	PP90-6		
DETAIL DIM.	DD90-5	DD90-6		

DD90-3

Ver. 2 Rel. 3/23/2016

BOARD # & REV:


C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43506

(419) 636-6705 DD90-3

±.015


TOLERANCE FOR CUTOUT (WINDOW):


REQUESTED BY:

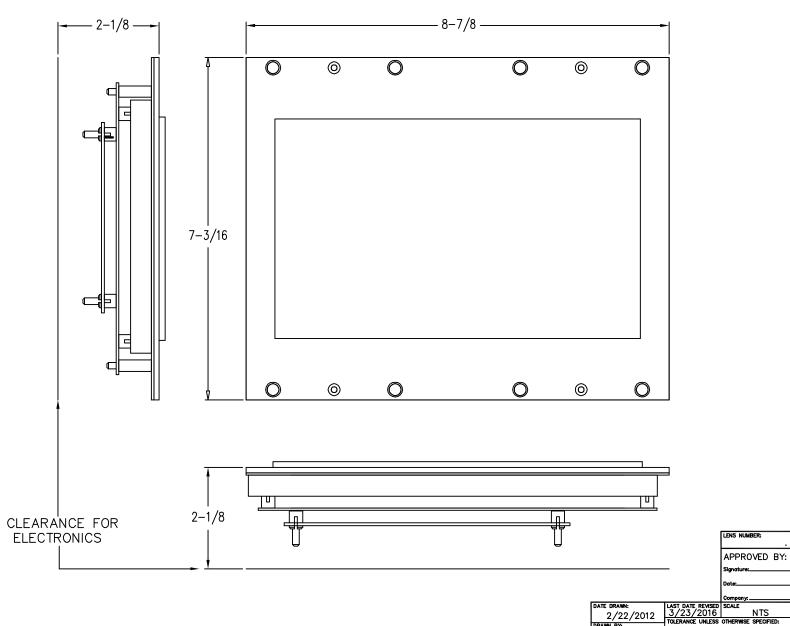



DD90-4


VER.2 REL. 3/23/2016

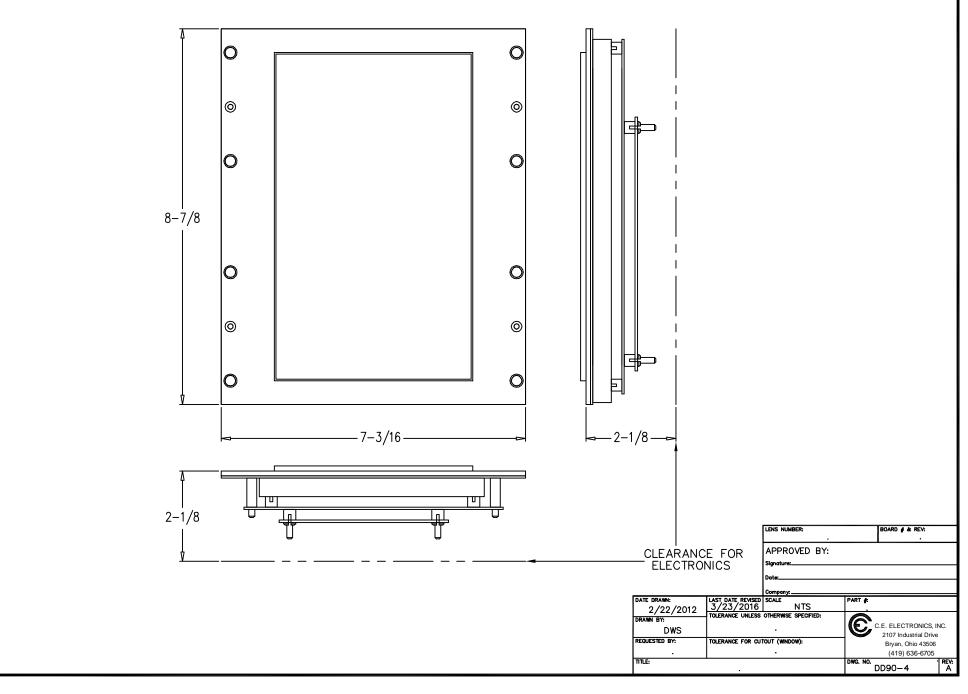

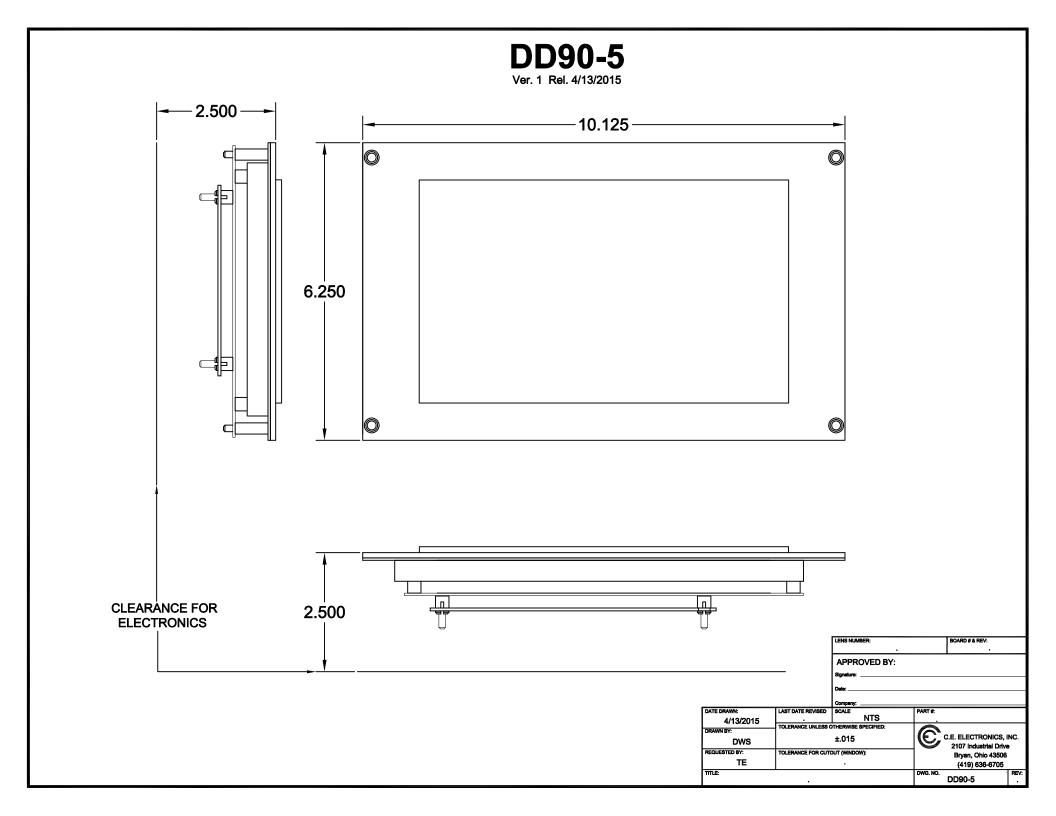

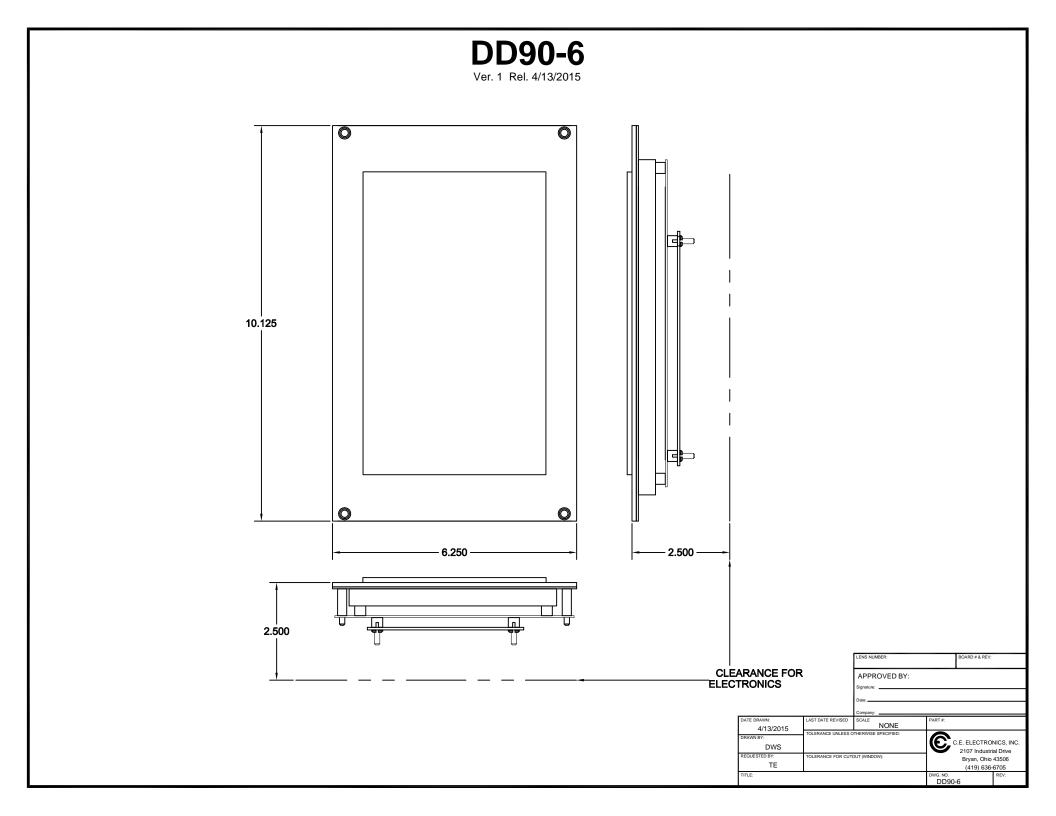


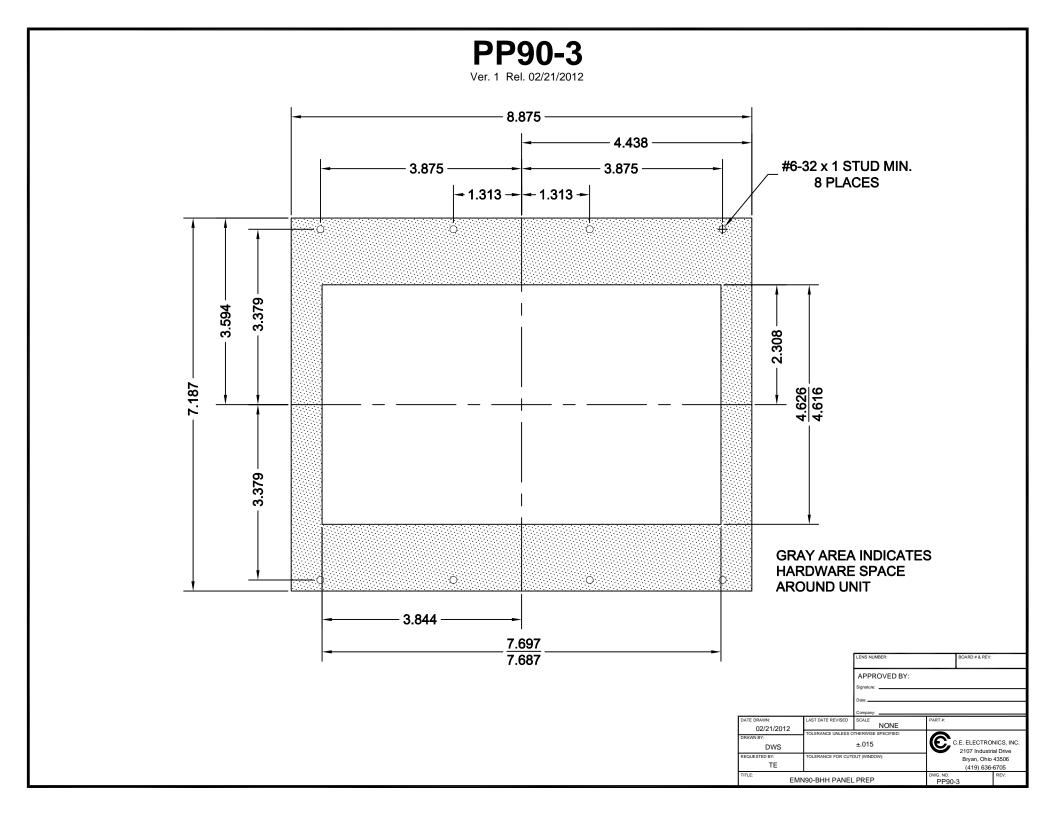

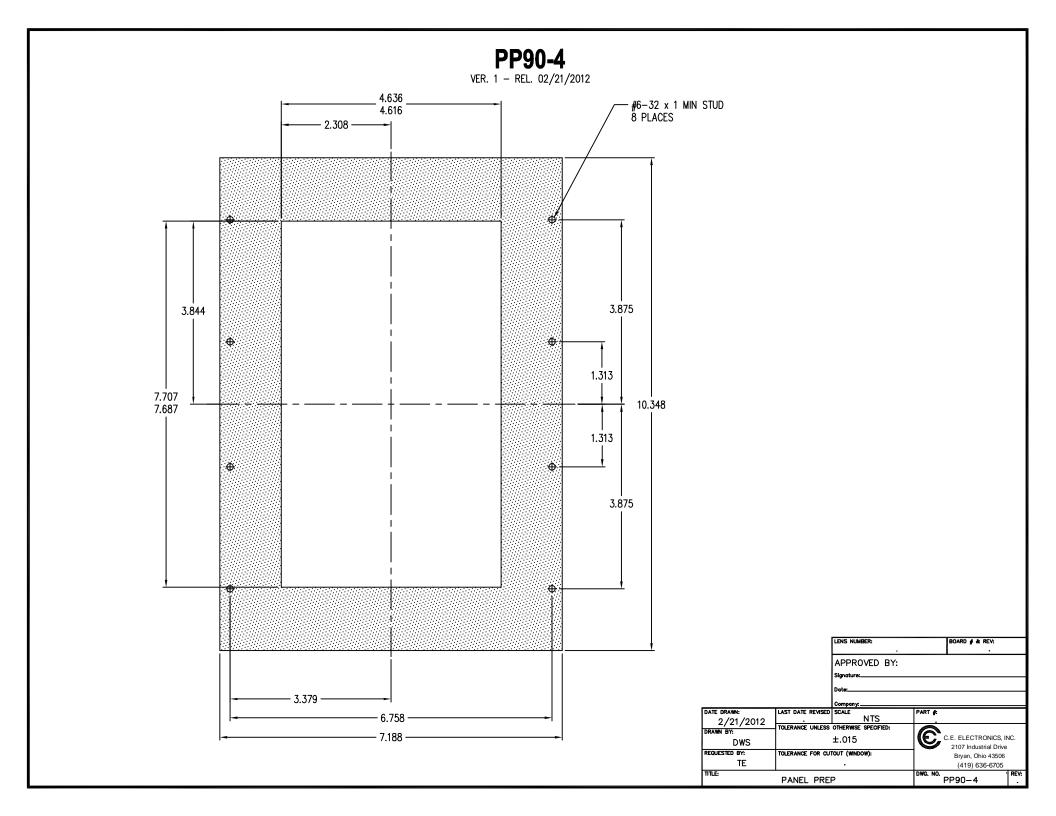

PP90-5

Ver. 1 Rel. 4/17/2015

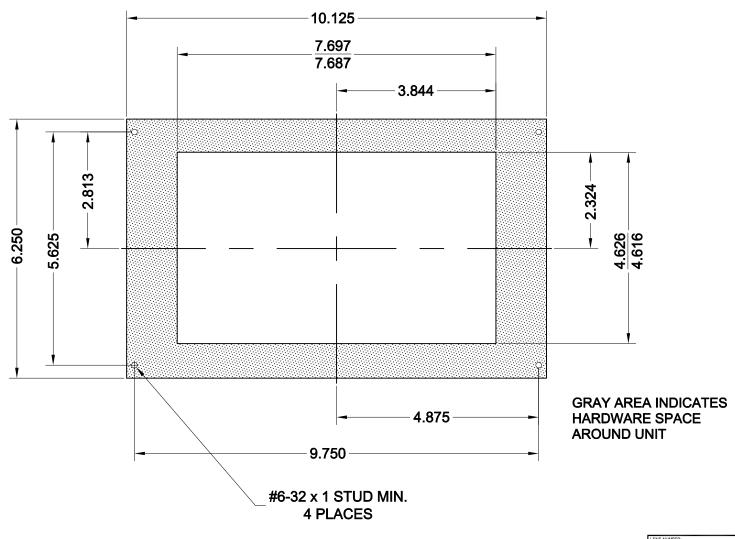

LENS NUMBER:

APPROVED BY:

Signature:

Date:

Company:

Date:

4/17/2015

DRAWN BY:

DWS

REQUESTED BY:

TOLERANCE FOR CUTOUT (WINDOW):

TE

TITLE:

EMN90-CHX PANEL PREP

BOARD # & REV.

ROONE

APART #:


C.E. ELECTRONICS, INC.
2107 Industrial Drive
Bryan, Ohio 43506
(419) 636-6705


REV.

PP90-5

PP90-6

Ver. 1 Rel. 4/17/2015

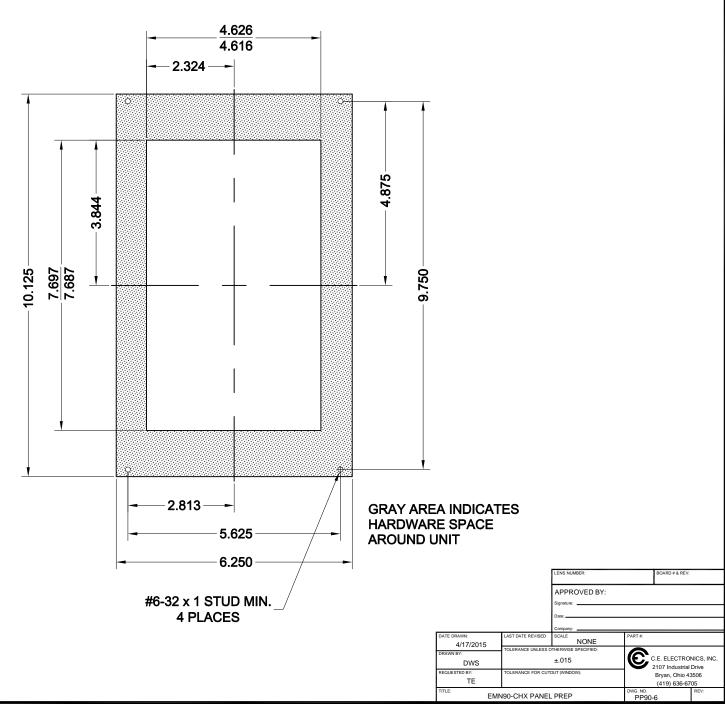

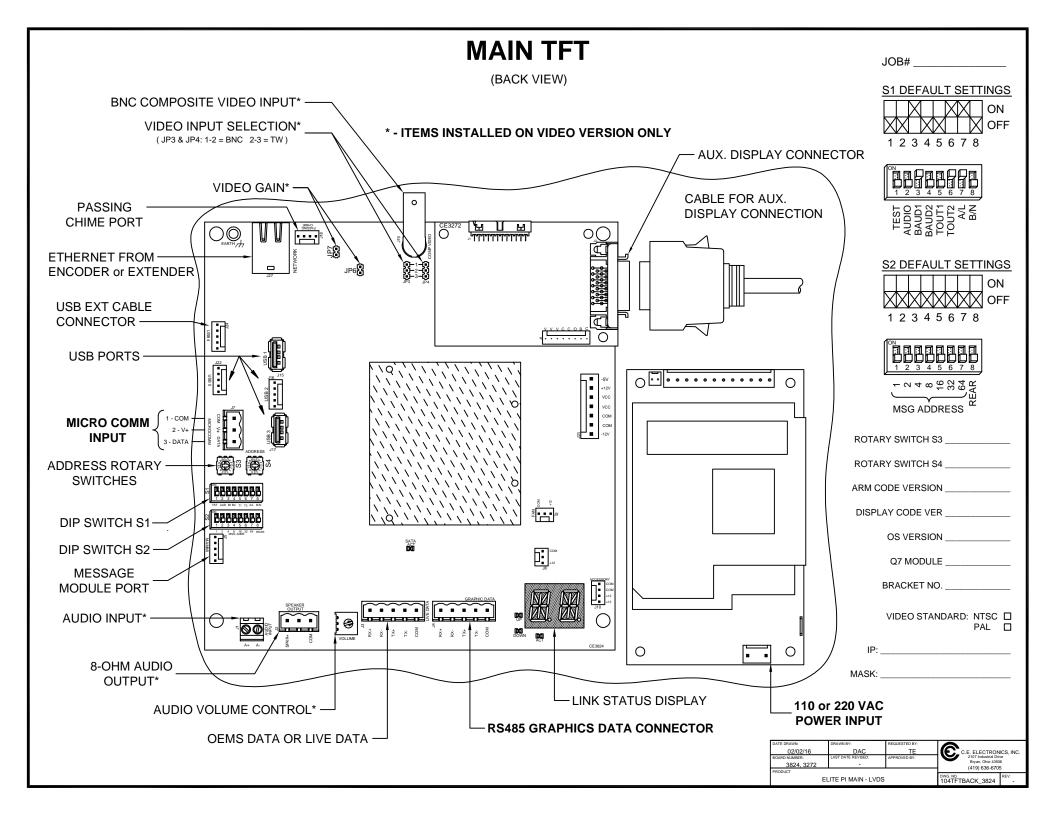

S1 DIP SWITCH SETTINGS

DIP Switch 1 - Test Mode

Off = Normal Run Mode

On = The display will cycle up and down through all programmed floors (Front Side Only).

DIP Switch 2 - Audio Output

Off = Audio Software Controlled

On = Audio Enabled

DIP Switch 4, 3 - RS485 Configuration Link Baud Rate (Must match Transfer Program)

DS4	DS3	BAUD RATE
OFF	OFF	9600
OFF	ON	19200 (Default)
ON	OFF	38400
ON	ON	57600

DIP Switch 6, 5 - Watchdog Period (Length of time the PIC waits for a response from Elite Display before resetting the display)

DS6	DS5	Wait Period
OFF	OFF	One Minute
OFF	ON	Two Minutes
ON	OFF	Three Minutes (Default)
ON	ON	Never Reset Display

DIP Switch 7 - Converter Board Display Mode (does not affect TFT screen)

Off = Scan Slot Data Displayed

On = ASCII Data Displayed

NOTE: Left Cube Dot = Priority Message Sent

Right Cube Dot = Door Strobe Active

DIP Switch 8 - Single/Multi-Car

Off = Single Car - Standard MICRO COMM Links

On = Multi-Car - Special 8-to-1 MICRO COMM Links Only!

ROTARY SWITCH SETTINGS

Rotary Switch S3 - Used for USB transfers. Default setting is 0.


Rotary Switch S4 - Unit Address

This switch sets the address of the Elite PI unit. The default is address 1, which is switch setting 0.


NOTE: This address must match the Transfer program setting.

S4	Unit Address						
0	1	4	5	8	9	С	13
1	2	5	6	9	10	D	14
2	3	6	7	Α	11	Ε	15
3	4	7	8	В	12	F	16

MICRO COMM LINK



SMARTMUX to ELITE PI and (if needed) to ELITE PI

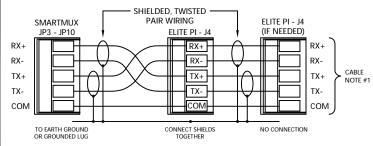

NOTE: Shields MUST be grounded to controller/earth ground lug

S2 DIP SWITCH SETTINGS

ARRIVAL ARROWS & DESTINATIONS DS1 - DS7 set the unit's floor number.

DS7	DS6	DS5	DS4	DS3	DS2	DS1	FLOOR
(64)	(32)	(16)	(8)	(4)	(2)	(1)	NUMBER
OFF	OFF	OFF	OFF	OFF	OFF	OFF	CAR UNIT
OFF	OFF	OFF	OFF	OFF	OFF	ON	FLOOR 1
OFF	OFF	OFF	OFF	OFF	ON	OFF	FLOOR 2
OFF	OFF	OFF	OFF	OFF	ON	ON	FLOOR 3
:	••	:	••	-:-	:	••	:
:	:	:	:	:	:	:	:
ON	ON	ON	ON	ON	OFF	ON	FLOOR 125
ON	ON	ON	ON	ON	ON	OFF	FLOOR 126
ON	ON	ON	ON	ON	ON	ON	NOT USED

Switch 8 sets the unit as front or rear. DS8 OFF - Front Unit DS8 ON - Rear Unit

VIDEO TEST MODE

Video test mode uses a combination of DIP switch and rotary switch settings. Please write down the initial setting of the S3 and S4 rotary switches before starting this process.

Entering Video Test Mode

Set DIP switch 1 to OFF, then set S3 and S4 to position F. Next, set DIP switch 1 to ON. The Live Video Adjustment menu will appear on the screen with Brightness highlighted.

Choosing Item to Adjust

The highlighted item is the current selection. To choose a different item to adjust, set S3 as shown below:

S3	Adjustment	S3	Adjustment
F	Brightness	В	Video Standard
Ε	Contrast	Α	Vertical Stretch
D	Color	9	Default
С	Tint	8	Original

Making Adjustments

Highlight the item to change and turn S4 for the best display quality. Default and Original Settings

Default resets the display to the factory default settings. Original cancels any changes made and restores the values stored before entering Video Test mode. Highlight the item to use, turn S4 in either direction, and wait five seconds. The display will reset to the default or previous settings.

Exiting Video Test Mode

To save the new video settings and exit Video Test, set DIP switch 1 to OFF. Reset S3 and S4 to the values recorded before starting the process.

Video Gain

JP7 and JP6 control the video gain. Use a shunt to short the pins of the jumpers as shown in the table below (OFF = No Shunt, ON = Shunt):

JP7	JP6	VIDEO GAIN
OFF	OFF	No Gain (Default)
OFF	ON	Lowest Gain
ON	OFF	
ON	ON	Highest Gain


Adjusting Audio Volume

If you need audio, connect an 8-ohm speaker to J2 on the Elite PI board. Set the volume by adjusting Volume pot R2 (3/4 turn pot). Adjust the pot clockwise to increase the volume.

CABLE NOTES:

- 1) Use shielded, twisted pair wires. We recommend using 24-gauge or larger wires. NOTE: Connect shields to controller/earth ground.
- 2) Use one wire of a twisted pair or a separate wire for common.
- 3) The audio input cable should be a shielded, twisted pair cable.
- 4) BNC composite video cable 75 ohm RG6 recommended.
- 5) Twisted pair video cable Unshielded twisted-pair wire recommended. Baluns required C.E.# V23501P02

DATE DRAWN: 02/10/16	DAC	REQUESTED BY: TE		C.E. ELECTRONICS, IN	IC.
BOARD NUMBER: 3824	LAST DATE REVISED: 10/06/17	APPROVED BY:		Bryan, OH 43506 (419) 636-6705	
PRODUCT CE3824 TFT Setup Information				3824_SETUP	REV:

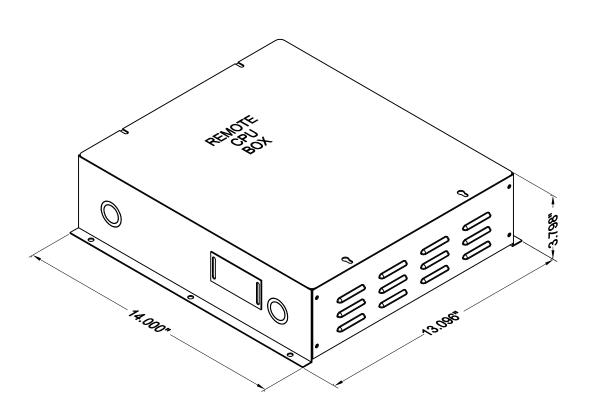

REMOTE CPU BOX

This CPU Box was designed to provide outputs for auxiliary displays that can drive and assist our Elite Pl's. This unit can be a solution for elevator cabs that either are having issues with a restricted space or for mulit-car capabilities for hallway use. The system can be centrally located up to 25 feet from the screens. One remote CPU can drive up to 2 screens at once.

Typical Applications

- Used on car top and/or hoistway
- Operating Auxiliary screen

Features:

- Live video (optional)
- Self testing
- Elite PI Designer software
- Elite PI Transfer software
- Multi-car capabilities for hallway use
- CPU Box can be up to 25 feet from screen.
- One remote CPU box can support 2 screens

TO ORDER: - ERXXX - X X X

SCREEN SIZE:

"084" = 8.4

"090" = 9.0 "104" = 10.4

"121" = 12.1

"150" = 15.0

SCREEN ORIENTATION:

"H" = HORIZONTAL (Landscape)

"V" = VERTICAL (Portrait)

CONFIGURED AT FACTORY

VIDEO TYPE:

"L" = NONE

"V" = COMPOSITE VIDEO INPUT