

DRIVER BOARD DIAGRAM FOR: OAHE-SX (Using display board CE2572)
 OAHF-SX (Using display board CE2572)
 OLHS-SX (Using display board CE2573)

JOB# _____



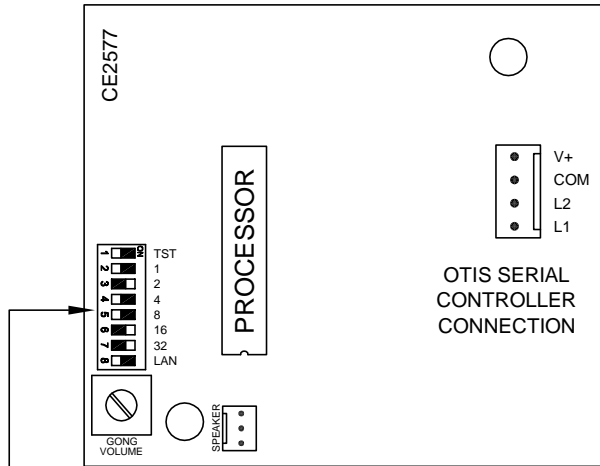


CHART TO SELECT ADDRESS WITH DIP SWITCH


DIP SWITCH #	VALUE						ADDRESS
	32	16	8	4	2	1	
0	0	0	0	0	0	0	INVALID
0	0	0	0	0	0	0	INVALID
0	0	0	0	0	0	0	INVALID
0	0	0	0	0	0	0	INVALID
0	0	0	1	0	0	0	ADDRESS #4
0	0	0	1	0	1	0	ADDRESS #5
0	0	0	1	1	0	0	ADDRESS #6
0	0	0	1	1	1	0	ADDRESS #7
0	0	1	0	0	0	0	ADDRESS #8
0	0	1	0	0	1	0	ADDRESS #9
0	0	1	0	1	0	0	ADDRESS #10
0	0	1	0	1	1	0	ADDRESS #11
0	0	1	1	0	0	0	ADDRESS #12
0	0	1	1	0	1	0	ADDRESS #13
0	0	1	1	1	0	0	ADDRESS #14
0	0	1	1	1	1	0	ADDRESS #15
0	1	0	0	0	0	0	ADDRESS #16
0	1	0	0	0	1	0	ADDRESS #17
0	1	0	0	1	0	0	ADDRESS #18
0	1	0	0	1	1	0	ADDRESS #19
0	1	0	1	0	0	0	ADDRESS #20
0	1	0	1	0	1	0	ADDRESS #21
0	1	0	1	1	0	0	ADDRESS #22
0	1	0	1	1	1	0	ADDRESS #23
0	1	1	0	0	0	0	ADDRESS #24
0	1	1	0	0	1	0	ADDRESS #25
0	1	1	0	1	0	0	ADDRESS #26
0	1	1	0	1	1	0	ADDRESS #27
0	1	1	1	0	0	0	ADDRESS #28
0	1	1	1	0	1	0	ADDRESS #29
0	1	1	1	1	0	0	ADDRESS #30
0	1	1	1	1	1	0	ADDRESS #31
1	0	0	0	0	0	0	ADDRESS #32
1	0	0	0	0	0	1	ADDRESS #33
1	0	0	0	0	1	0	ADDRESS #34
1	0	0	0	0	1	1	ADDRESS #35
1	0	0	1	0	0	0	ADDRESS #36
1	0	0	1	0	1	0	ADDRESS #37
1	0	0	1	1	0	0	ADDRESS #38
1	0	0	1	1	1	0	ADDRESS #39
1	0	1	0	0	0	0	ADDRESS #40
1	0	1	0	0	1	0	ADDRESS #41
1	0	1	0	1	0	0	ADDRESS #42
1	0	1	0	1	1	0	ADDRESS #43
1	0	1	1	0	0	0	ADDRESS #44
1	0	1	1	0	1	0	ADDRESS #45
1	0	1	1	1	0	0	ADDRESS #46
1	0	1	1	1	1	0	ADDRESS #47
1	1	0	0	0	0	0	ADDRESS #48
1	1	0	0	0	1	0	ADDRESS #49
1	1	0	0	1	0	0	ADDRESS #50
1	1	0	0	1	1	0	ADDRESS #51
1	1	0	1	0	0	0	ADDRESS #52
1	1	0	1	0	1	0	ADDRESS #53
1	1	0	1	1	0	0	ADDRESS #54
1	1	0	1	1	1	0	ADDRESS #55
1	1	1	0	0	0	0	ADDRESS #56
1	1	1	0	0	1	0	ADDRESS #57
1	1	1	0	1	0	0	ADDRESS #58
1	1	1	0	1	1	0	ADDRESS #59
1	1	1	1	0	0	0	ADDRESS #60
1	1	1	1	0	1	0	ADDRESS #61
1	1	1	1	1	0	0	ADDRESS #62
1	1	1	1	1	1	0	ADDRESS #63
1	1	1	1	1	1	1	ADDRESS #64

DIP SWITCH DETAIL

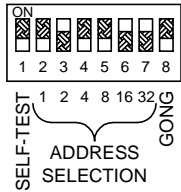


DIP SWITCH LEGEND

DEFAULT SETTINGS



DATA BITS

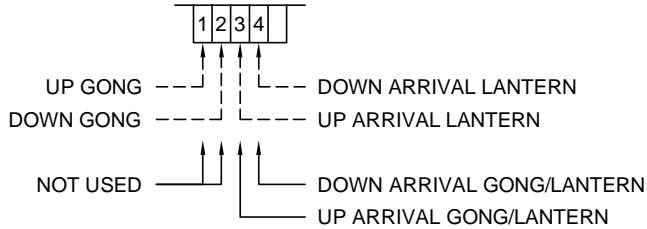

----- = DIP SWITCH 8 OFF
 _____ = DIP SWITCH 8 ON

DIP1	DIP8	FUNCTION
1	X	SELF-TEST MODE
0	0	GONG USES BIT 1 UP (SINGLE) AND BIT 2 DOWN (DOUBLE)
0	1	GONG USES BIT 3 UP AND BIT 4 DOWN (BOTH SINGLE)

CODE VERSION: _____

BOARD VERSION CE2577 __

DATE DRAWN: 03/15/02	DRAWN BY: K.L.S.	REQUESTED BY: J.K.	C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43506 (419) 636-6705
BOARD NUMBER: 2577	LAST DATE REVISED: 05/05/05	APPROVED BY:	
PRODUCT OAHE-SX, OAHF-SX, OLHS-SX			
DWG. NO. CE2577-01-A			REV. E

The following Otis data must be furnished at the specified addresses for the Otis Serial Lantern to work properly. The address is selected by setting DIP switches 2-7 as shown on the back of this page. The board reads the address determined by the DIP switch setting. For example, if the DIP switch is set to address 50, the board will read the bits at address 50.

At DIP switch address—selected by the DIP switch setting on the unit (Default 50):

DIP switch 1 puts the unit in self-test mode.

DIP switch 1 and DIP switch 8 *OFF*:

- Bit 1—Up Gong (Single)
- Bit 2—Down Gong (Double)
- Bit 3—Up Arrival Arrow/Lantern
- Bit 4—Down Arrival Arrow/Lantern

DIP switch 1 *OFF* and DIP switch 8 *ON*:

- Bit 1—Not Used
- Bit 2—Not Used
- Bit 3—Up Arrival Arrow/Lantern and Up Gong (Single)
- Bit 4—Down Arrival Arrow/Lantern and Down Gong (Single)

NOTE: ECA function is not available with this unit.