
DH220-XXXXX DOT MATRIX LED DIGITAL INDICATOR

Ĉ

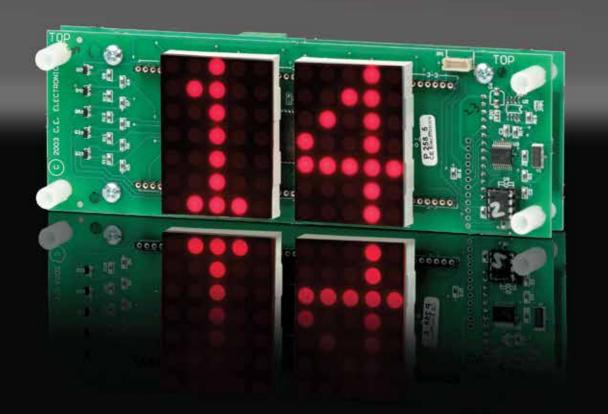

C.E. Electronics, Inc. (US) 2107 Industrial Drive, Bryan, Ohio 43506 p: 419.636.6705 www.ceelectronics.com

C.E. Electronics, Ltd. (UK) P.O. Box 1679 Marlow, Bucks SL7 3ZG, UK p: +44 (0) 1628 487633 www.ceelectronics.co.uk

DOT MATRIX 2" CHARACTERS

Dot Matrix LED digital indicator for floor position display, as well as car direction, if desired. Any alphanumeric or custom character can be displayed in either single digit with arrow or double digit floor designations.

TYPICAL APPLICATIONS:

Car-OP Panel

> Transom-car or Hall

FEATURES:

>Low cost design

- >Self contained unit
- >Latched input
- > Self testing
- > Scrolling
- > Passing chime output
- > Error detection and
- >correction feature
- >UL listed

METAL: > 70100002






Ver. 8 Rel. 11/21/2016

"F" = NEGATIVE 24-48VDC

"G" = NEGATIVE 125VDC

"X" = IF MICRO COMM

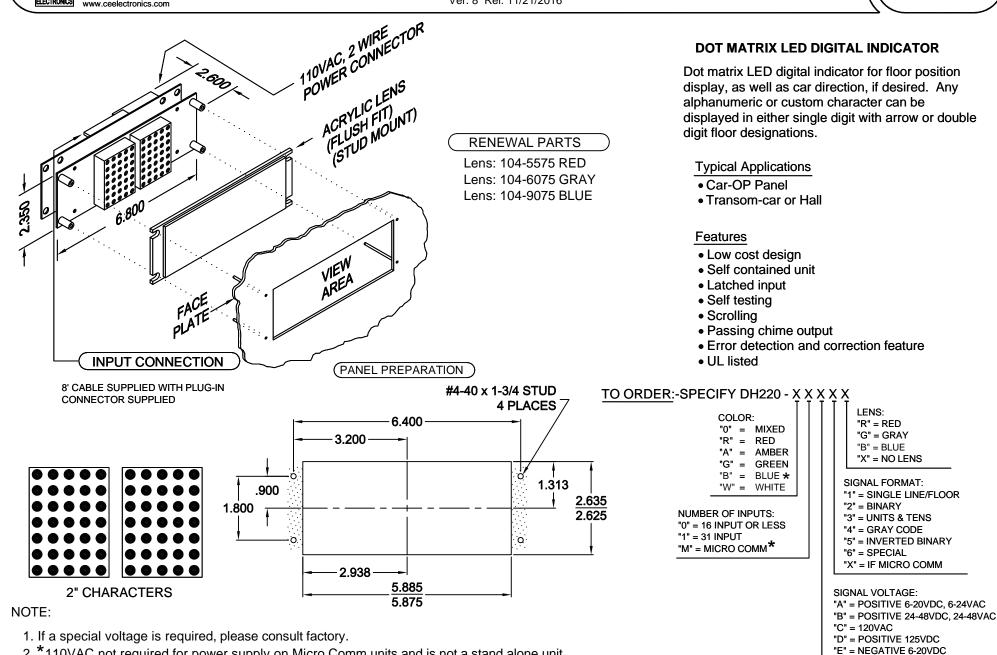


- 2. *110VAC not required for power supply on Micro Comm units and is not a stand alone unit. Must be use in conjunction with a Micro Comm interface.
- 3. *Blue can not be mixed with other colors


00 0^{TOP} OOOO00000000 $\Omega \Omega \Omega \Omega$ 0000 OOOC000000000 0000ر ا 0 00000 000000 00 00000 DISPLAY BOARD# CODE VERSION FLOORS: ROTARY SWITCH S1 DRIVER BOARD#

CODE VERSION _____

S3 DIP SWITCH DETAIL

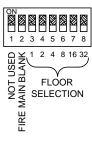

S3 DEFAULT SETTINGS

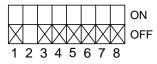

To SELF-TEST display unit, short the two pins on the S2 header and release. NOTE: If S2 is a rotary switch, set it to "F" and back to 0 to self-test.

DIP switch 1 (MB) has no function with this unit.

The Micro Comm driver must be programmed to send messages with the level required to activate the features listed below.

- To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM).
- To blank the display during a fire alternate (level two) message, remove resistor R3 (FA) from the board.
- Do not program a floor value for Floor 63 if the Fire Blanking feature is required.

DH220/320-XM

DIP switches 3-8 off is an all call using travel signals. DIP switches 3-8 on and resistor R5 (64) removed is an all call using arrival signals.

The floor address switches setup the display arrows as arrival (hall) arrows. Refer to the "S3 DIP SWITCH DETAIL" and turn on the floor address switches whose value adds up to the desired floor. For example, to display the arrows only when the unit is at floor 19, turn on switches 3, 4, and 7 (values 1, 2, and 16: 1+2+16=19). The Micro Comm driver must be set up to send arrival information.

To operate this unit as a rear lantern, remove resistor R4 (REAR) from the board. NOTE: The Micro Comm driver must be sending the MC2000 data stream to use this feature. Call Tech Support at 419-636-6705 for more information.

NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

ſ	DATE DRAWN:	DRAWN BY:	REQUESTED BY:		
	07/08/05	DAC	DV	C.E. ELECTRONICS, INC. 2107 Industrial Drive	
t	BOARD NUMBER:	LAST DATE REVISED:	APPROVED BY:		
I	3092, 3006	09/21/10		Bryan, Ohio 43 (419) 636-6	
ſ	PRODUCT			(419) 636-6705	
I	DH220/320-XM MICRO COMM DOT MATRIX			DWG. NO.	REV:
	DH220/320-X	DHX20-XM_01	Α		

ROLL RATE ADJUSTMENT


SELF-TEST JACK

JOB#





Ver. 1 Rel. 06/18/03

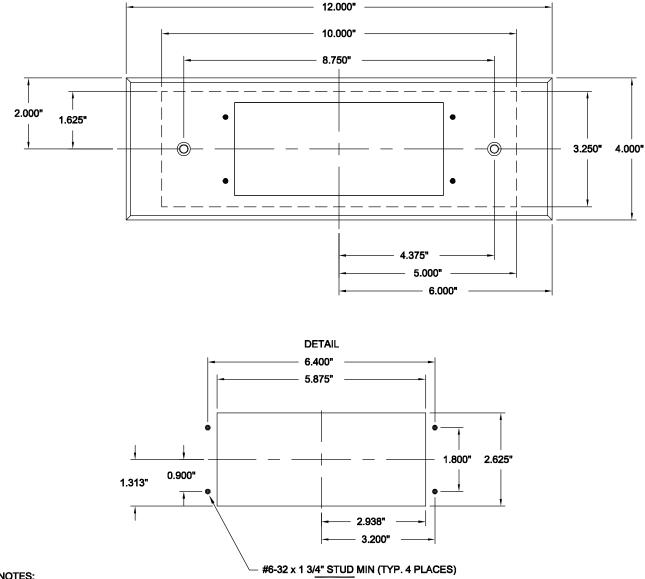

COVERPLATE / BOX FOR 2 or 3 DIGIT 1" OR 2" DOT MATRIX DISPLAY

NOTES:

#4 STAINLESS STEEL, .125" HORIZONTAL GRAIN **BEVELED EDGES - APPROXIMATELY 15°** GALVANIZED BOX REQUIRED, 3.5" DEEP, NO EXTRUDED BOX COUNTERSINK MOUNTING HOLES FOR #10-32 TAMPERPROOF SCREW