
DH230-RXXXX DOT MATRIX LED DIGITAL INDICATOR

DOT MATRIX **3" CHARACTERS**

Dot Matrix LED digital indicator for floor position display, as well as car direction, if desired. Any alphanumeric or custom character can be displayed in either single digit with arrow or double digit floor designations.

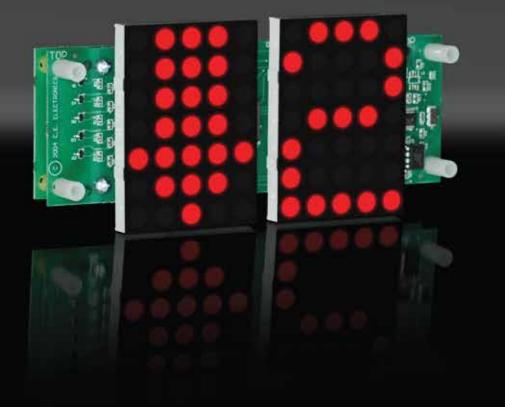

TYPICAL APPLICATIONS:

Car-OP Panel > Transom-car or Hall

FEATURES:

>Low cost design

- > Self contained unit
- >Latched input
- > Self testing
- > Scrolling
- > Passing chime output
- > Error detection and
- > correction feature
- >UL listed

METAL: >70100002



C.E. Electronics, Inc.

C.E. Electronics, Ltd.

2107 Industrial Drive Bryan, OH 43506

Marlow, Bucks, UK International Lift Equipment (ILE) Highams Park, London, UK

ph: 419.636.6705

ph: +44 (0) 1628 487633 ph: 0208 527 9669

www.ceelectronics.com


www.ceelectronics.co.uk www.ileweb.com



C.E. Electronics, Inc. 2107 Industrial Drive Bryan, OH 43506 PH (419) 636-6705 FX (419) 636-2516 www.ceelectronics.com



Ver. 4 Rel. 11/05/08

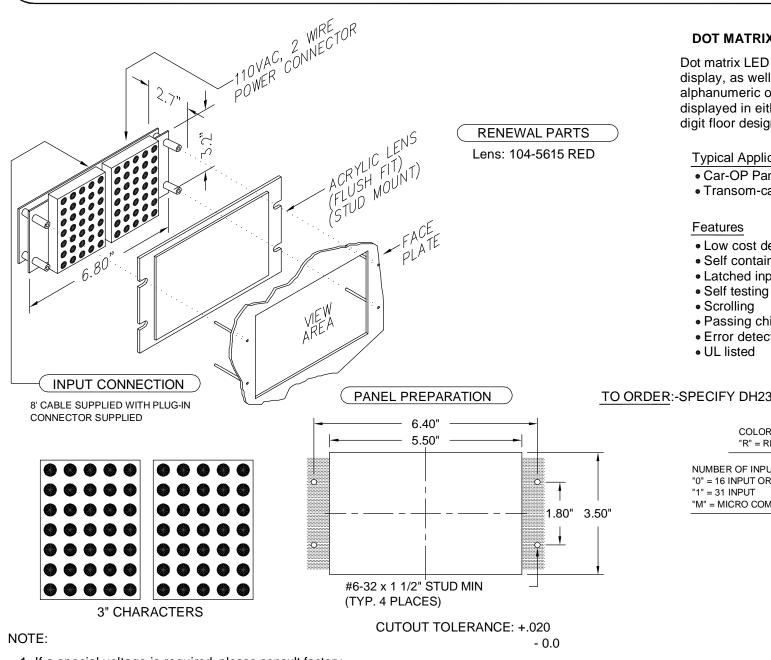

DOT MATRIX LED DIGITAL INDICATOR

Dot matrix LED digital indicator for floor position display, as well as car direction, if desired. Any alphanumeric or custom character can be displayed in either single digit with arrow or double digit floor designations.

Typical Applications

Car-OP Panel

Transom-car or Hall


- Low cost design
- Self contained unit
- Latched input
- Passing chime output
- Error detection and correction feature

TO ORDER:-SPECIFY DH230 -R X X X X

"A "E "C "C "E "F "F	LENS: "R" = RED "X" = NO LENS SIGNAL FORMAT: "1" = SINGLE LINE/FLOOR "2" = BINARY "3" = UNITS & TENS "4" = GRAY CODE "5" = INVERTED BINARY "6" = SPECIAL "X" = IF MICRO COMM IGNAL VOLTAGE: A" = POSITIVE 6-20VDC, 6-24VAC 3" = POSITIVE 24-48VDC, 24-48VAC "" = NEGATIVE 125VDC " = IF MICRO COMM
--	---

1. If a special voltage is required, please consult factory.

2.*110VAC not required for power supply on Micro Comm units

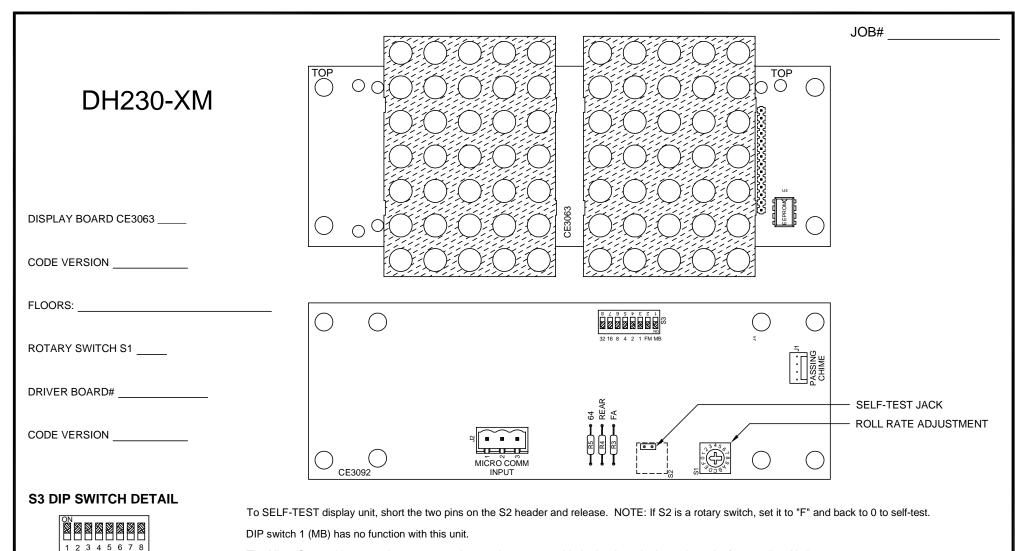

The Micro Comm driver must be programmed to send messages with the level required to activate the features listed below.

- To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM). ٠
- To blank the display during a fire alternate (level two) message, remove resistor R3 (FA) from the board.
- Do not program a floor value for Floor 63 if the Fire Blanking feature is required.

DIP switches 3-8 off is an all call using travel signals. DIP switches 3-8 on and resistor R5 (64) removed is an all call using arrival signals.

The floor address switches setup the display arrows as arrival (hall) arrows. Refer to the "S3 DIP SWITCH DETAIL" and turn on the floor address switches whose value adds up to the desired floor. For example, to display the arrows only when the unit is at floor 19, turn on switches 3, 4, and 7 (values 1, 2, and 16: 1+2+16=19). The Micro Comm driver must be set up to send arrival information.

To operate this unit as a rear lantern, remove resistor R4 (REAR) from the board. NOTE: The Micro Comm driver must be sending the MC2000 data stream to use this feature. Call Tech Support at 419-636-6705 for more information.


DATE DRAWN: 05/30/07	DRAWN BY: DAC	REQUESTED BY: DV		IICS. INC.
BOARD NUMBER: 3092, 3063	LAST DATE REVISED:	APPROVED BY:	2107 Industrial I Bryan, Ohio 43 (419) 636-6	506
DH230 MICRO COMM DOT MATRIX			DWG. NO. DH230-XM_01	REV:


NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

S3 DEFAULT SETTINGS

ANK 1 2 4 8 16 32 TOT CON TO

FIRE



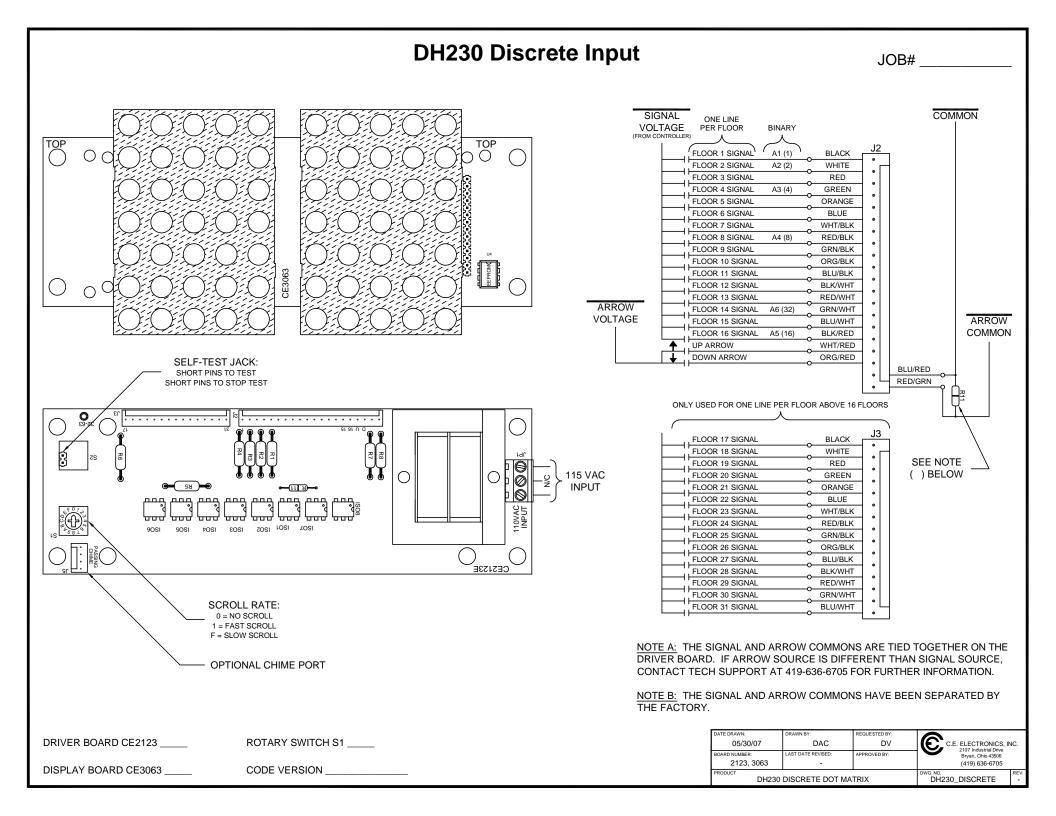

	BINARY FLOOR CHART		BINARY BITS
1000000			96 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
0111111	0101111	0011111	0001111
0111110	0101110	0011110	0001110
0111101	0101101	0011101	0001101
0111100	0101100	0011100	0001100
0111011	0101011	0011011	0001011
0111010	0101010	0011010	0001010
0111001	0101001	0011001	0001001
0111000	0101000	0011000	0001000
0110111	0100111	0010111	0000111
0110110	0100110	0010110	0000110
0110101	0100101	0010101	0000101
0110100	0100100	0010100	0000100
0110011	0100011	0010011	0000011
0110010	0100010	0010010	0000010
0110001	0100001	0010001	0000001
0110000	0100000	0010000	0000000

INSTALLATION GUIDE

1. MAKE SURE THE INPUT RESISTORS ARE FULLY SEATED IN THEIR SOCKETS.

2. CONNECT 115VAC TO THE OUTER TERMINALS OF CONNECTOR J1. THE CENTER TERMINAL HAS NO CONNECTION.

- 3. SHORT THE TWO PINS OF S2 (TEST JACK) TOGETHER. THE DISPLAY WILL CYCLE THROUGH THE FLOOR DATA. THIS SHOWS WHAT FLOOR MARKINGS WILL BE DISPLAYED AND ALLOWS ADJUSTMENT OF THE SCROLL RATE AND OPTIONAL PASSING CHIME VOLUME.
- 4. MAKE SURE THE SIGNAL CABLE(S) IS PLUGGED INTO THE DRIVER BOARD CORRECTLY.
- 5. CONNECT THE SIGNAL CABLE(S) TO THE CONTROLLER. THE VOLTAGE AND DC POLARITY ARE MARKED ON THE REVERSE SIDE. THE UNIT WORKS LIKE A LIGHT BULB; IT NEEDS VOLTAGE FROM COMMON TO THE SELECTED INPUT.
- 6. IF THE INPUT IS DC AND YOU SUSPECT THE POLARITY IS WRONG, PUT THE SELECTED FLOOR WIRE TO COMMON AND COMMON TO THE SELECTED FLOOR INPUT. IF THE UNIT DISPLAYS THE FLOOR, CONTACT TECH SUPPORT.
- 7. IF THE INPUT FORMAT IS SINGLE LINE PER FLOOR, ONLY ONE WIRE SHOULD HAVE VOLTAGE PRESENT (WITH REFERENCE TO COMMON) AT ANY TIME.
- 8. IF THE UNIT DOES NOT SEEM TO WORK PROPERLY, RECHECK THE ABOVE STEPS. IF THE PROBLEM CONTINUES, RECORD THE SERIAL NUMBER FROM THE WHITE LABEL ON THE UNIT AND EXACTLY WHAT THE UNIT DISPLAYS AT EACH FLOOR, THEN CONTACT TECH SUPPORT AT 419-636-6705.

DATE DRAWN:	DRAWN BY:	REQUESTED BY:		
04/24/07	DAC	DV	C.E. ELECTRONICS, INC.	
BOARD NUMBER:	LAST DATE REVISED:	APPROVED BY:	Bryan, Ohio 43506	
N/A	-		(419) 636-6705	
PRODUCT			DWG. NO.	REV:
COMPETITOR SERIES BINARY FLOOR CHART			COMP_BINCHART_TJ	-