DH330-XXXXX DOT MATRIX LED DIGITAL INDICATOR



DOT MATRIX **3" CHARACTERS**

Dot Matrix LED digital indicator for floor position display, as well as car direction, if desired. Any alphanumeric or custom character can be displayed in either single digit with seperate "UP" and "DOWN" arrows. Double digit with single "UP/DOWN" arrow, or triple digit floor designations,

TYPICAL APPLICATIONS:

Car-OP Panel > Transom-car or Hall

FEATURES:

- >Low cost design
- > Self contained unit
- >Latched input
- > Self testing
- Scrolling
- > Passing chime output
- > Error detection and
- correction feature

>UL listed



C.E. Electronics, Inc.

C.E. Electronics, Ltd. International Lift Equipment (ILE)

Marlow, Bucks, UK Highams Park, London, UK

2107 Industrial Drive Bryan, OH 43506 ph: 419.636.6705 ph: 0208 527 9669

ph: +44 (0) 1628 487633

www.ceelectronics.co.uk www.ileweb.com










Ver. 4 Rel. 11/06/08


"G" = NEGATIVE 125VDC

"X" = IF MICRO COMM

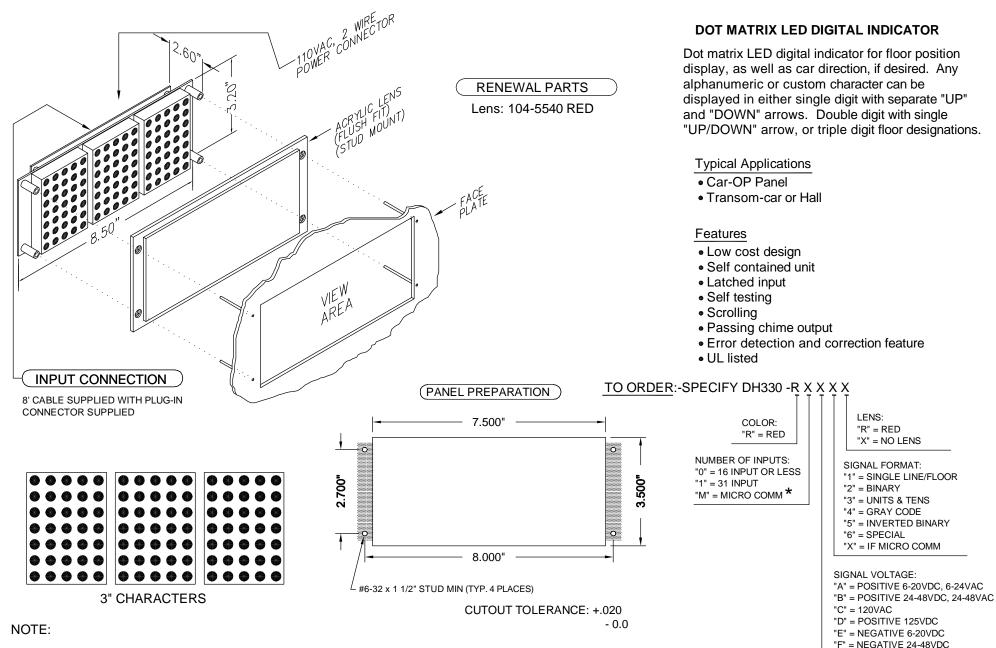

1. If a special voltage is required, please consult factory.

2. *110VAC not required for power supply on Micro Comm units

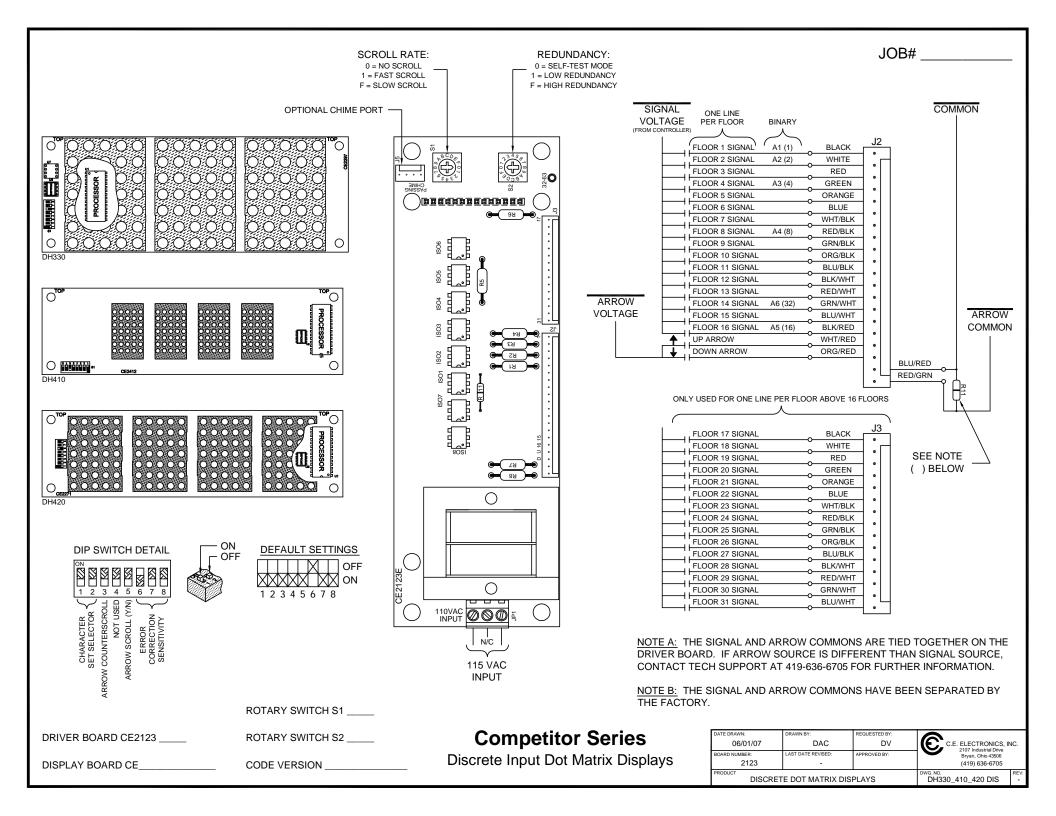

To SELF-TEST the unit, set rotary switch S2 to "0". Return the rotary switch to its original setting to end self-test. NOTE: S1 at "0" and S2 at "1" are factory default settings.

The following information refers to S3 on the 3092 board:

DIP switch 1 (MB) has no function with this unit.

A Micro Comm driver programmed to send priority messages is required to activate the features listed below.

- To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM).
- To blank the display during a fire alternate (level two) message, remove resistor R3 (FA) from the board.
- Do not program a floor value for Floor 63 if the Fire Blanking feature is required.

DIP switches 3-8 *OFF* is an all-call using travel data. DIP switches 3-8 *ON* and R5 (64) removed is an all-call using in-car data.

The floor address switches setup the display arrows as arrival (hall) arrows. Refer to the "S3 DIP SWITCH DETAIL" and turn on the floor address switches whose value adds up to the desired floor. For example, to display the arrows only when the unit is at floor 19, turn on switches 3, 4, and 7 (values 1, 2, and 16: 1+2+16=19). The Micro Comm driver must be set up to send arrival information.

To operate this unit as a rear lantern, remove resistor R4 (REAR) from the board. NOTE: This feature requires a Micro Comm driver ending the MC2000 data stream. Call Tech Support at 419-636-6705 for more information.

NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

ON OFF

S1 DEFAULT SETTINGS

12345678


DISPLAY BOARD CE2297

DRIVER BOARD CE3092

CODE VERSION

ROTARY SWITCHES - S1 S2

CODE VERSION

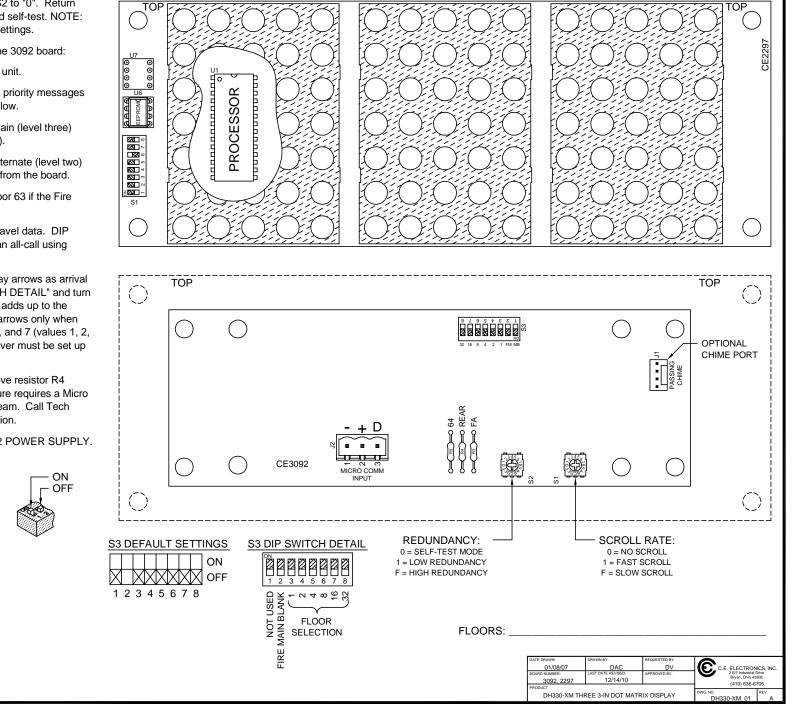

JOB#

DH330-XM

	BINARY FLOOR CHART		
1000000			486 A56 102 A56 100 A5
0111111	0101111	0011111	0001111
0111110	0101110	0011110	0001110
0111101	0101101	0011101	0001101
0111100	0101100	0011100	0001100
0111011	0101011	0011011	0001011
0111010	0101010	0011010	0001010
0111001	0101001	0011001	0001001
0111000	0101000	0011000	0001000
0110111	0100111	0010111	0000111
0110110	0100110	0010110	0000110
0110101	0100101	0010101	0000101
0110100	0100100	0010100	0000100
0110011	0100011	0010011	0000011
0110010	0100010	0010010	0000010
0110001	0100001	0010001	0000001
0110000	0100000	0010000	0000000

INSTALLATION GUIDE

1. MAKE SURE THE INPUT RESISTORS ARE FULLY SEATED IN THEIR SOCKETS.

2. CONNECT 115VAC TO THE OUTER TERMINALS OF CONNECTOR J1. THE CENTER TERMINAL HAS NO CONNECTION.

- 3. SET ROTARY SWITCH S2 TO "0" TO START SELF-TEST. THE DISPLAY WILL CYCLE THROUGH THE FLOOR DATA. THIS SHOWS WHAT FLOOR MARKINGS WILL DISPLAY AND ALLOWS ADJUSTMENT OF THE SCROLL RATE AND OPTIONAL PASSING CHIME VOLUME. SET S2 TO AT LEAST "1" (FACTORY DEFAULT IS "2") TO END SELF-TEST.
- 4. MAKE SURE THE SIGNAL CABLE(S) IS PLUGGED INTO THE DRIVER BOARD CORRECTLY.
- 5. CONNECT THE SIGNAL CABLE(S) TO THE CONTROLLER. THE VOLTAGE AND DC POLARITY ARE MARKED ON THE REVERSE SIDE. THE UNIT WORKS LIKE A LIGHT BULB; IT NEEDS VOLTAGE FROM COMMON TO THE SELECTED INPUT.
- 6. IF THE INPUT IS DC AND YOU SUSPECT THE POLARITY IS WRONG, PUT THE SELECTED FLOOR WIRE TO COMMON AND COMMON TO THE SELECTED FLOOR INPUT. IF THE UNIT DISPLAYS THE FLOOR, CONTACT TECH SUPPORT.
- 7. IF THE INPUT FORMAT IS SINGLE LINE PER FLOOR, ONLY ONE WIRE SHOULD HAVE VOLTAGE PRESENT (WITH REFERENCE TO COMMON) AT ANY TIME.
- 8. IF THE UNIT DOES NOT SEEM TO WORK PROPERLY, RECHECK THE ABOVE STEPS. IF THE PROBLEM CONTINUES, RECORD THE SERIAL NUMBER FROM THE WHITE LABEL ON THE UNIT AND EXACTLY WHAT THE UNIT DISPLAYS AT EACH FLOOR, THEN CONTACT TECH SUPPORT AT 419-636-6705.

DATE DRAWN: 06/04/07	DRAWN BY: DAC	REQUESTED BY: DV		IC
BOARD NUMBER: N/A	LAST DATE REVISED:	APPROVED BY:	2107 Industrial Drive Bryan, Ohio 43506 (419) 636-6705	.0.
COMPETITOR SERIES BINARY FLOOR CHART			DWG. NO. COMP_BINCHART_RS	REV: