## **DH330-XM**

JOB#

To SELF-TEST the unit, set rotary switch S2 to "0". Return the rotary switch to its original setting to end self-test. NOTE: S1 at "0" and S2 at "1" are factory default settings.

The following information refers to S3 on the 3092 board:

DIP switch 1 (MB) has no function with this unit.

A Micro Comm driver programmed to send priority messages is required to activate the features listed below.


- To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM).
- To blank the display during a fire alternate (level two) message, remove resistor R3 (FA) from the board.
- Do not program a floor value for Floor 63 if the Fire Blanking feature is required.

DIP switches 3-8 *OFF* is an all-call using travel data. DIP switches 3-8 *ON* and R5 (64) removed is an all-call using in-car data.

The floor address switches setup the display arrows as arrival (hall) arrows. Refer to the "S3 DIP SWITCH DETAIL" and turn on the floor address switches whose value adds up to the desired floor. For example, to display the arrows only when the unit is at floor 19, turn on switches 3, 4, and 7 (values 1, 2, and 16: 1+2+16=19). The Micro Comm driver must be set up to send arrival information.

To operate this unit as a rear lantern, remove resistor R4 (REAR) from the board. NOTE: This feature requires a Micro Comm driver ending the MC2000 data stream. Call Tech Support at 419-636-6705 for more information.

NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

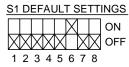



DISPLAY BOARD CE2297
CODE VERSION
DRIVER BOARD CE3092
ROTARY SWITCHES - S1 S2
CODE VERSION

