
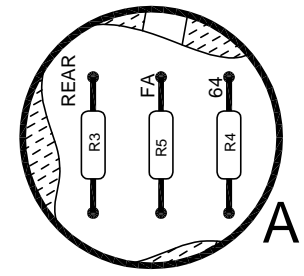
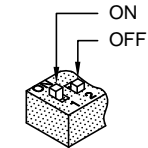
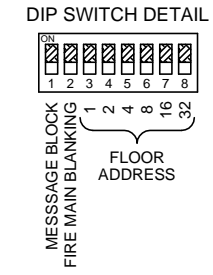



MH222E

JOB# _____

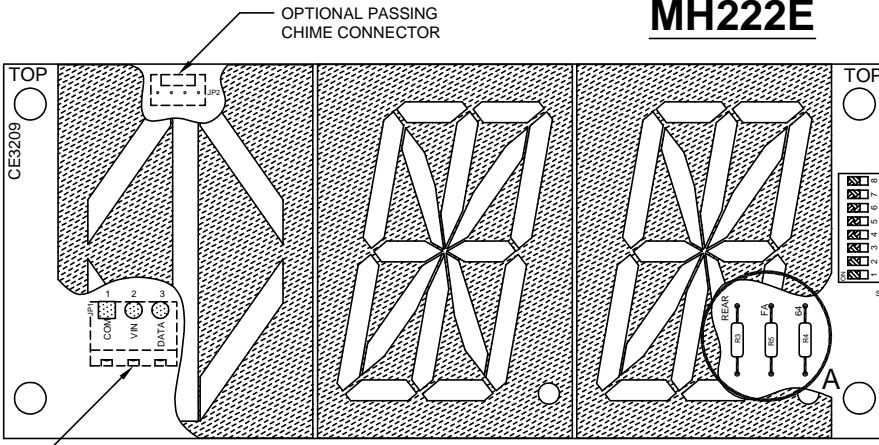

FLOOR ADDRESS CHART

DS8	DS7	DS6	DS5	DS4	DS3	FLOOR	DS8	DS7	DS6	DS5	DS4	DS3	FLOOR
0	0	0	0	0	0	TRAVEL (#0)	1	0	0	0	0	0	FLOOR #32
0	0	0	0	0	1	FLOOR #1	1	0	0	0	0	1	FLOOR #33
0	0	0	0	1	0	FLOOR #2	1	0	0	0	1	0	FLOOR #34
0	0	0	0	1	1	FLOOR #3	1	0	0	0	1	1	FLOOR #35
0	0	0	1	0	0	FLOOR #4	1	0	0	1	0	0	FLOOR #36
0	0	0	1	0	1	FLOOR #5	1	0	0	1	0	1	FLOOR #37
0	0	0	1	1	0	FLOOR #6	1	0	0	1	1	0	FLOOR #38
0	0	0	1	1	1	FLOOR #7	1	0	0	1	1	1	FLOOR #39
0	0	1	0	0	0	FLOOR #8	1	0	1	0	0	0	FLOOR #40
0	0	1	0	0	1	FLOOR #9	1	0	1	0	0	1	FLOOR #41
0	0	1	0	1	0	FLOOR #10	1	0	1	0	1	0	FLOOR #42
0	0	1	0	1	1	FLOOR #11	1	0	1	0	1	1	FLOOR #43
0	0	1	1	0	0	FLOOR #12	1	0	1	1	0	0	FLOOR #44
0	0	1	1	0	1	FLOOR #13	1	0	1	1	0	1	FLOOR #45
0	0	1	1	1	0	FLOOR #14	1	0	1	1	1	0	FLOOR #46
0	0	1	1	1	1	FLOOR #15	1	0	1	1	1	1	FLOOR #47
0	1	0	0	0	0	FLOOR #16	1	1	0	0	0	0	FLOOR #48
0	1	0	0	0	1	FLOOR #17	1	1	0	0	0	1	FLOOR #49
0	1	0	0	1	0	FLOOR #18	1	1	0	0	1	0	FLOOR #50
0	1	0	0	1	1	FLOOR #19	1	1	0	0	1	1	FLOOR #51
0	1	0	1	0	0	FLOOR #20	1	1	0	1	0	0	FLOOR #52
0	1	0	1	0	1	FLOOR #21	1	1	0	1	0	1	FLOOR #53
0	1	0	1	1	0	FLOOR #22	1	1	0	1	1	0	FLOOR #54
0	1	0	1	1	1	FLOOR #23	1	1	0	1	1	1	FLOOR #55
0	1	1	0	0	0	FLOOR #24	1	1	1	0	0	0	FLOOR #56
0	1	1	0	0	1	FLOOR #25	1	1	1	0	0	1	FLOOR #57
0	1	1	0	1	0	FLOOR #26	1	1	1	0	1	0	FLOOR #58
0	1	1	0	1	1	FLOOR #27	1	1	1	0	1	1	FLOOR #59
0	1	1	1	0	0	FLOOR #28	1	1	1	1	0	0	FLOOR #60
0	1	1	1	0	1	FLOOR #29	1	1	1	1	0	1	FLOOR #61
0	1	1	1	1	0	FLOOR #30	1	1	1	1	1	0	FLOOR #62
0	1	1	1	1	1	FLOOR #31	1	1	1	1	1	1	FLOOR #63

CODE VERSION _____

BOARD VERSION CE3209 _____

The Micro Comm driver must be programmed to send messages with the level required to activate the features listed below. Level 0 messages will always be displayed, regardless of DIP switch or resistor settings.

To block level one messages from being displayed, turn on DIP switch 1 (MB).

To blank the display during a fire alternate (level two) message, remove resistor R5 (FA) from the board.

To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM).

To operate the display as an in-car lantern using travel signals, turn off DIP switches 3-8 and verify that resistor R4 (64) is installed.

To operate the display as an in-car lantern using arrival signals, turn on DIP switches 3-8 and remove resistor R4 (64) from the board.

To operate the unit as a hall (arrival) display, use the above chart to set the DIP switches to the desired floor. For floors above 63, remove resistor R4 (64) from the board, subtract 64 from the desired floor number, and use the chart to set the DIP switches for the resulting floor number. For example, to set the unit for floor 75, remove R4 and set the DIP switches for floor 11 (75 - 64 = 11). NOTE: The Micro Comm driver must be set up to send arrival information.

To operate the MH222E as a rear unit, remove resistor R3 (R) from the board. NOTE: The Micro Comm driver must be sending the MC2000 data stream to use this feature. Call Tech Support at 419-636-6705 for more information.

NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

DATE DRAWN: 03/23/09	DRAWN BY: DAC	REQUESTED BY: MG	C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43506 (419) 636-6705
BOARD NUMBER: 3209	LAST DATE REVISED: -	APPROVED BY:	
PRODUCT: MH222E MICRO COMM DISPLAY	DWG. NO. MH222E_02	REV. -	